


2. 各部の名称と設定

2. Parts Names and Settings

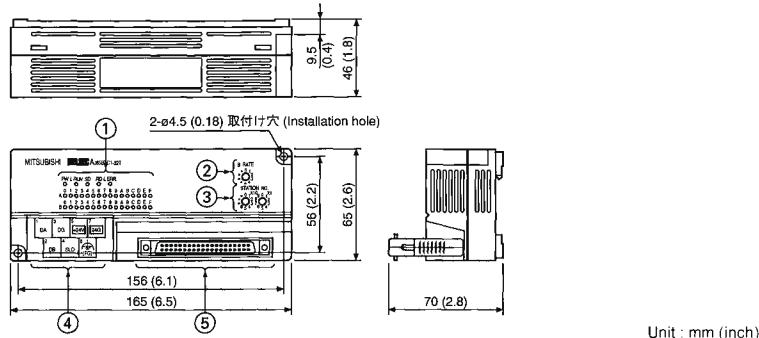

No.	名称	内 容
①	動作表示 LED	確認内容 PW 出力ユニット電源ONにより点灯
	L RUN	出力ユニットがマスタ局と正常にデータ交信しているかチェックする。 マスタ局から正常なデータを受信すると点灯、タイムオーバにより消灯する。 (正常なデータを受信することにより点灯する)
	SD	データ送信により点灯
	RD	受信データにより点灯
	L ERR.	伝送エラー (CRC エラー) により点灯、 タイムオーバにより消灯する。(RUNも 消灯) 局番設定、伝送速度設定ミスにより点灯 (設定を修正し電源再投入により消灯) 局番設定、伝送速度設定が途中で変化した ときERR点滅 (RUNは点灯、ユニットは 電源上げ時の局番設定および伝送速度 設定の条件で動作する)
	0~F	入出力のON/OFF状態を表示 ON状態で点灯、OFF状態で消灯
		設定 伝送速度 0 156 kbps 1 625 kbps 2 2.5 Mbps 3 5 Mbps 4 10 Mbps 伝送速度設定スイッチは必ず0~4の範囲で設定してください。
②	伝送速度 設定	Setting Transmission speed 0 156 kbps 1 625 kbps 2 2.5 Mbps 3 5 Mbps 4 10 Mbps
③	局番設定 スイッチ	リモートI/Oユニットの局番は、必ず01~64の範囲で設定してください。(*1) ・"X10"は、局番の10の位を設定します。 ・"X1"は、局番の1の位を設定します。
④	端子台	出力ユニット電源、伝送、入出力信号の接続用端子台です。
⑤	コネクタ	入力信号の接続用コネクタです。 コネクタは本体に付属しています。

*1 局番を重複して設定することはできません。

AJ65BTC1-32T 形 CC-Link システムリモート出力ユニットユーザーズマニュアル AJ65BTC1-32T CC-Link System Remote Output Module User's Manual

● 安全上のご注意 ● (ご使用前に必ずお読みください)

本製品のご使用に際しては、本マニュアルをよくお読みいただきと共に、安全に対して十分に注意を払って、正しい取扱いをしていただくようお願いいたします。


なお、この注意事項は本製品に関するもののみについて記載したもので、シーケンサシステムとしての安全上のご注意に関しては、CPUユニットのユーザーズマニュアルを参照してください。
この●安全上のご注意●では、安全注意事項のランクを「危険」、「注意」として区分しております。



取り扱いを誤った場合に、危険な状況が起こりえ、死亡または重傷を受ける可能性が想定される場合。



取り扱いを誤った場合に、危険な状況が起こりえ、中程度の傷害や軽傷を受ける可能性が想定される場合および物的損害だけの発生が想定される場合。

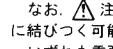

なお、△注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。


いずれも重要な内容を記載していますので必ず守ってください。
本マニュアルは必要なときに読めるように大切に保管すると共に、必ず最終ユーザまでお届けいただくようお願いいたします。

【設計上の注意事項】



● データリンクが交信異常になったとき、交信異常局は次のような状態になります。
交信状態情報を用いて、システムが安全側に働くようにシーケンスプログラム上にイントラック回路を構成してください。
誤出力、誤動作により事故の恐れがあります。
リモートI/O局からの出力は、全点OFFします。


● リモートI/Oユニットの故障によっては、出力がON状態またはOFF状態になることがあります。
重大な事故につながるような出力信号については、外部監視する回路を設けてください。

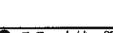

● ユニットは、CPUユニットユーザーズマニュアル記載の一般仕様の環境で使用してください。
一般仕様の範囲以外の環境で使用すると、感電、火災、誤動作、製品の損傷あるいは劣化の原因になります。

● 制御線と通信ケーブルは、主回路や動力線などと束線したり、近接したりしないでください。100mm以上を目安として離してください。
ノイズにより、誤動作の原因になります。

【取付け上の注意事項】

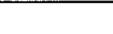

● ユニットの裏蓋部分には直接触らないでください。
ユニットの誤動作、故障の原因になります。

● ユニットは、DINレールまたは取付けネジにて、確実に固定し、取付けネジは規定トルク範囲内で確実に締め付けてください。
ネジの締付けがゆるいと、落下、短絡、誤動作の原因になります。

● ネジを締め過ぎると、ネジの被損による落とし、短絡の原因になります。

● コネクタは装着部に確実に接続したあと、ネジで固定してください。接触不良による誤動作の原因になります。

【配線上的注意事項】



● 配線作業などは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、感電あるいは製品の損傷の恐れがあります。

● 取付け、配線作業などの後、通電、運転を行う場合は、必ず製品に付属の端子カバーを開けてください。
端子カバーを開めないと、感電の恐れがあります。

本マニュアルは再生紙を使用しています。

● SAFETY PRECAUTIONS ● (Read these precautions before using.)

When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment. Refer to the CPU module user's manual for a description of the PLC system safety precautions.
These ● SAFETY PRECAUTIONS ● classify the safety precautions into two categories: "DANGER" and "CAUTION".



Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.



Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by △ CAUTION may also result in serious results.

In any case, it is important to follow the directions for usage.
Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

(0608) MEE

【DESIGN PRECAUTIONS】



● When a communication error occurs in the data link, the communication error station will be in the following condition. Configure an interlocking circuit in a sequence program using the communication status information so that the safety of the overall system is always maintained.
Accident may occur due to output error or malfunction.
Output points from remote I/O station will be all off.

● Output could be on or off when there is trouble in the remote I/O modules. So build an external monitoring circuit that will monitor any output signals that could cause serious trouble.



● Use each module in an environment as specified in the "general specification" in the CPU module user's manual. Usage of the module outside the general specification range may cause electric shock, fire, malfunction, product damage or deterioration.

● Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.

【INSTALLATION PRECAUTIONS】



● Do not directly touch the module's conductive parts.
Doing so could cause malfunction or trouble in the module.

● Tighten the module securely using DIN rail or installation screws within the specified torque range. Loose terminal screws may cause a short circuit or erroneous operation. If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws.

● After fully connecting the connector into place, secure it with a screw.
Poor contact may cause malfunctions.

【WIRING PRECAUTIONS】



● Completely turn off the externally supplied power used in the system when installing or placing wiring. Not completely turning off all power could result in electric shock or damage to the product.

● Make sure to close the terminal cover shipped with the product when starting the power supply or operation after installation, wiring, etc.
If terminal cover is not closed an electric shock may result.

Printed in Japan on recycled paper.

↑注意

- FG 端子はシーケンサ専用の D 種接地（第三種接地）以上で必ず接地を行ってください。感電・誤動作の恐れがあります。
 - 空き端子ネジは必ず付けてトルク範囲（42~50N·cm）で締付けてください。圧着端子と短絡する原因になります。
 - 壓着端子は適合端子端子を使用し、規定のトルクで締付けてください。先開形圧着端子を使用すると、端子ネジがゆるんだ場合に脱落し、故障の原因になります。
 - ユニットの配線は、製品の定格電圧および端子配列を確認した上で正しく行ってください。
 - 定格と異なった電源を接続したり、誤配線すると、火災、故障の原因になります。
 - 端子ネジの締付けは、規定トルク範囲内で行ってください。
端子ネジの締付けがゆるいと、火災や誤動作の原因になります。
 - 端子ネジを締め過ぎると、ネジの破損による短路、誤動作の原因になります。
 - ユニット内に、切粉や配線クズなどの異物が入らないように注意してください。火災、故障、誤動作の原因になります。
 - ユニットに接続する電線やケーブルは、必ずダクトに納める、またはクランプによる固定処理を行ってください。
ケーブルをダクトに納めなかつたり、クランプによる固定処理をしていないと、ケーブルのふらつきや移動、不注意の引っ張りなどによるユニットやケーブルの破損、ケーブルの接触不良による誤動作の原因になります。
 - 制御線と通信ケーブルは束ねてしまい、近接したりしないでください。ノイズにより、誤動作の原因になります。
 - ユニットに接続された通信ケーブルや電源ケーブルを取り外すときは、ケーブル部分を手で持てば引っ張らないでください。
コネクタ付きのケーブルは、ユニットに接続している部分のコネクタを手で持てば取り外してください。コネクタなしのケーブルは、ユニットに接続している部分のネジを緩めてから取り外してください。
 - ユニットに接続された通信ケーブルや電源ケーブルの接続不良による誤動作の原因になります。

【立上げ・保守時の注意事項】

危 險

- 通電中に端子に触れないでください。
感電の原因になります。
 - 清掃、端子ネジ、ユニット取付けネジの増し締めは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。

! 注意

- ユニットの分解、改造はしないでください。
故障、誤動作、ケガ、火災の原因になります。
 - ユニットは落下させたり、強い衝撃を与えないでください。
ユニットの破損の原因になります。
 - ユニットの盤への取付け・取外しは必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。
 - 端子台の着脱は、製品ご使用後、50回以内としてください。
(JIS B 3502 準拠)
 - ユニットに触れる前には、必ず接地された金属などに触れて、人体などに帯電している静電気を放電してください。
静電気を放電しないと、ユニットの故障や誤動作の原因になります。

【廃棄時の注意事項】

注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

1. 仕様

項目	内容
出力点数	32 点
絶縁方式	フォトカプラ絶縁
定格負荷電圧	DC12/24V
使用負荷電圧範囲	DC10.2～28.8V (リップル率 5%以内)
最大負荷電流	0.1A／1点 2A／1コモン
最大突入電流	0.4A 10msec 以下
OFF 時漏洩電流	0.1mA 以下
ON 時最大電圧降下	DC2.5V 以下 (MAX) 0.1A
出力形式	シングルタイプ
応答時間	OFF → ON 2msec 以下 ON → OFF 2msec 以下 (抵抗負荷)

CAUTION

- Always ground the FG terminal.
There is a risk of electric shock or malfunction.
 - Be sure to tighten any unused terminal screws within a tightening torque range (42 to 50N·cm).
Failure to do so may cause a short circuit due to contact with a solderless terminal.
 - Use applicable solderless terminals and tighten them with the specified torque.
If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
 - Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire and/or product failure.
 - Fix terminal screws securely within the regulated torque. Loose terminal screws may cause fire and/or malfunction.
If the terminal screws are too tight, it may cause short circuit or erroneous operation due to damage of the screws.
 - Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
 - Be sure to fix the wires or cables by ducts or clamps when connecting them to the module. Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
 - Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
 - When disconnecting a communication or power supply cable from the module, do not pull on the cable itself.
Disconnect cables not fitted with a connectors by holding and pulling the cable connector. Disconnect cables not fitted with a connector by removing the screws from the part connected to the module can cause damage to the module or cable, or malfunction due to cable connection faults.

【STARTING AND MAINTENANCE PRECAUTIONS】

DANGER

- Do not touch terminals when the power is on. Doing so could cause an electric shock.
 - Switch off all phases of the externally supplied power used in the system when cleaning the module or retightening the terminal or module mounting screws. Not doing so could result in electric shock.

! CAUTION

- Never try to disassemble or modify module. It may cause product failure, malfunction, fire or cause injury.
 - Do not drop or apply any strong impact to the module. Doing so may damage the module.
 - Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel. Not doing so could result in damage to the product.
 - Mounting/removing the terminal block is limited to 50 times after using a product. (IEC61131-2-compliant)
 - Always make sure to touch the grounded metal to discharge the electricity charged in the electricity charged in the body, etc., before touching the module.
Failure to do so may cause a failure or malfunctions of the module.

(DISPOSAL PRECAUTIONS

CAUTION

- When disposing of this product, treat it as industrial waste.

1. Specification

Item	Description
Number of output points	32 points
Isolation method	Photocoupler
Rated load voltage	12/24 VDC
Operating load voltage range	10.2 to 28.8 VDC (ripple ratio : within 5 %)
Max. load current	0.1 A/point 2 A/common
Max. inrush current	0.4 A 10 msec or lower
Leakage current at OFF	0.1 mA or lower
Max. voltage drop at ON	2.5 V or lower (MAX) 0.1 A
Output form	Sink type
Response time	OFF → ON 2 msec or lower
	ON → OFF 2 msec or lower (Resistive load)

項目	内容	Item	Description
出力部	電圧 DC10.2~28.8V (リップル率5%以内)	External Power supply for output	10.2 to 28.8 VDC (ripple ratio : within 5%)
外部供給電源	電流 50mA 以下 (TYP.DC24V1 コモン当たり) 外部負荷電流は含まず	Current	50 mA or lower (TYP.24 VDC/common) Not including external load current
サージキラー	クランプダイオード	Surge suppression	Clamp diode
コモン方式	32点1コモン	Common method	32 points/common
占有局数	1局	Number of stations occupied	1 station
I/O ユニット電源	電圧 DC15.6~28.8V (リップル率5%以内)	I/O module	15.6 to 28.8 VDC (ripple ratio : within 5%)
	電流 115mA 以下 (TYP.DC24V 時)	power supply	115 mA or lower (at TYP.24 VDC)
ノイズ耐量	DC タイプのノイズ電圧 500Vp-p ノイズ幅 1μs, ノイズ周波数 25~60Hz の ノイズシミュレータによる	Noise durability	DC type noise voltage 500Vp-p, Noise width 1μs, Noise frequency 25 to 60Hz (noise simulator condition)
耐電圧	DC 外部端子一括 アース間 AC500V 1分間	Withstanding voltage	500 VAC for 1 minute between all DC external terminals together and ground
絶縁抵抗	DC 外部端子一括 アース間 DC500V 絶縁抵抗計にて 10MΩ 以上	Insulation resistance	10 MΩ or higher, measured with a 500 VDC insulation resistance tester
質量	280g	Weight	280 g (0.6 lb)
外部接続方式	40 ピンコネクタ (I/O 部)、7 点端子台 (M3.5 ネジ締付けトルク 59~88N·cm) 伝送及びユニット電源部	External wiring system	40 pin connector (I/O area), 7-point terminal block (M3.5 screws tightening torque : 59 to 88 N·cm) transmission and module power supply
適合電線サイズ	0.3 mm² (I/O 部)、0.75~2mm² (伝送、ユニット電源部)	Applicable wire size	0.3 mm² (I/O area), 0.75 to 2 mm² (transmission and module power supply)
ユニット取付けネジ	M4 × 0.7mm × 16mm 以上ネジ (締付けトルク範囲 78~118N·cm) DIN レールでの取付けも可能	Module installation screw	M4 (0.16) × 0.7 mm (0.03) × 16 mm (0.63) screws (tightening torque range 78 to 118 N·cm) DIN rails can be used for installation
適用 DIN レール	TH35-7.5Fe, TH35-7.5Al, TH35-15Fe (JIS C 2812に準拠)	Applicable DIN rail	TH35-7.5Fe, TH35-7.5Al, TH35-15Fe (conforming to IEC 60715)

